 


CROSLLEY

Instruction

CR3009A

iSOLO

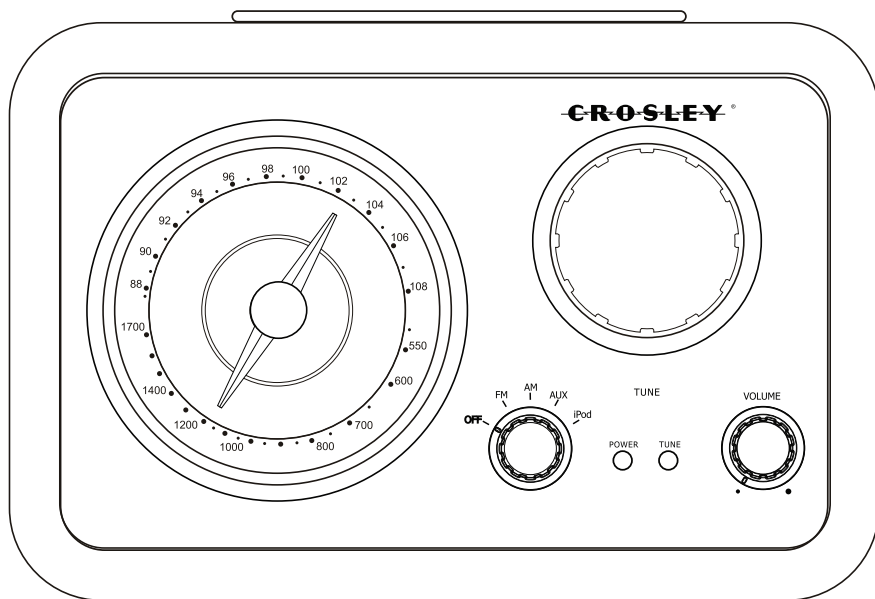

IMPORTANT SAFETY INSTRUCTION

PLEASE READ CAREFULLY ALL THE FOLLOWING IMPORTANT SAFEGUARDS THAT ARE APPLICABLE TO YOUR EQUIPMENT

1. Read Instructions - All the safety and operating instructions should be read before the product is operated.
2. Retain instructions - The safety and operating instructions should be retained for future reference.
3. Heed Warnings - All warnings on the product and in the operating Instructions should be adhered to.
4. Follow Instructions - All operating and use instructions should be followed.
5. Cleaning - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. Attachments - Do not use attachments not recommended by the product manufacturer as they may cause hazards.
7. Water and Moisture - Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.
8. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
9. Ventilation - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
10. Power Sources - This product should be operated only from the type of power source indicated on the marking label, if you are not sure of the type of power supply to your home. Consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
11. Grounding or Polarization - This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
12. Power - Cord Protection - Power - supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.
13. Lightning - For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power - line surges.
14. Power Lines - An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
15. Overloading - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
16. Object and Liquid Entry - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short - out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
17. Servicing - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
18. Damage Requiring Service - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a. When the power-supply cord or plug is damaged.
 - b. If liquid has been spilled, or objects have fallen into the product.
 - c. If the product has been exposed to rain or water.
 - d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - e. If the product has been dropped or damaged in any way.
 - f. When the product exhibits a distinct change in performance - this indicates a need for service.
19. Replacement Parts - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
20. Safety Check - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
21. Wall or ceiling Mounting - The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
22. Heat - The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.



WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

WARNING:

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. DO NOT REMOVE COVER. PILOT LAMPS SOLDERED IN PLACE. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION:

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER - SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lighting flash with arrowhead symbol, within an equilateral triangle, is intended to alert user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert user to the presence of important operating and maintenance (servicing) instruction in the literature accompanying the appliance.

SPECIFICATION

Frequency Range	: FM 87.5 - 108.5 MHz
	: AM 525 - 1710 KHz
Power Source	: AC 120V ~ 60 HZ
Power Consumption	: 30 W
Antennas	: External FM Antenna
	: Built-in Ferrite Am Bar

* DESIGN AND SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE.

iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

YOU'RE THERE WITH A CROSLEY
CROSLEY RADIO

1220 East Oak Street • Louisville, Kentucky 40204
www.crosleyradio.com

910-242800-001

Welcome

Thank you for purchasing the Crosley Radio iSOLO Tabletop Receiver. Before operating this unit, please read this manual thoroughly and retain it for future reference.

Features

AroundSound™ - Your Crosley iSolo features our exclusive AroundSound design. Using a single, custom - designed driver, the iSolo radio simulates surround sound, creating a warm, ambient tone, regardless of where you may be located with regards to the radio.

Portable Audio Ready - Your iSolo radio comes ready to play portable audio products, including mp3 players, satellite radio, gaming devices, cd players, walkmans, - basically anything with a headphone jack!

About This Manual

Instructions in this manual describe the controls and functions of the iSOLO.

Table of Contents

Getting Started

Control Locators	4
Connector Locators	5
Unpacking	6
Set Up	6


Basic Operation

AM/FM Radio	7
Portable Audio Ready	7
Auxillary Output	7
iPod/iPhone Operation	8

General

Troubleshooting Guide	9
Warranty Information	10

 
Getting Started

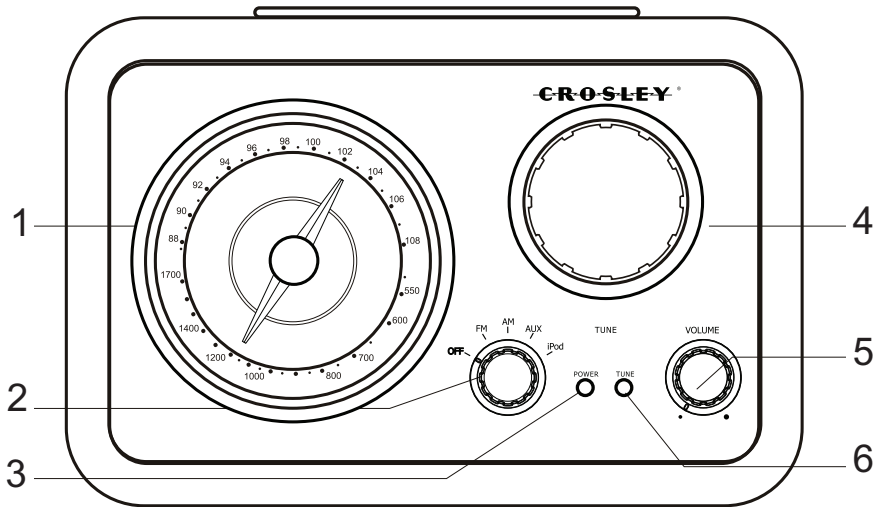

Control Locators

1. Tuner Dial
2. Function Knob
3. Power Indicator
4. Tuning Knob
5. Volume Knob
6. Tuning LED

 Getting Started

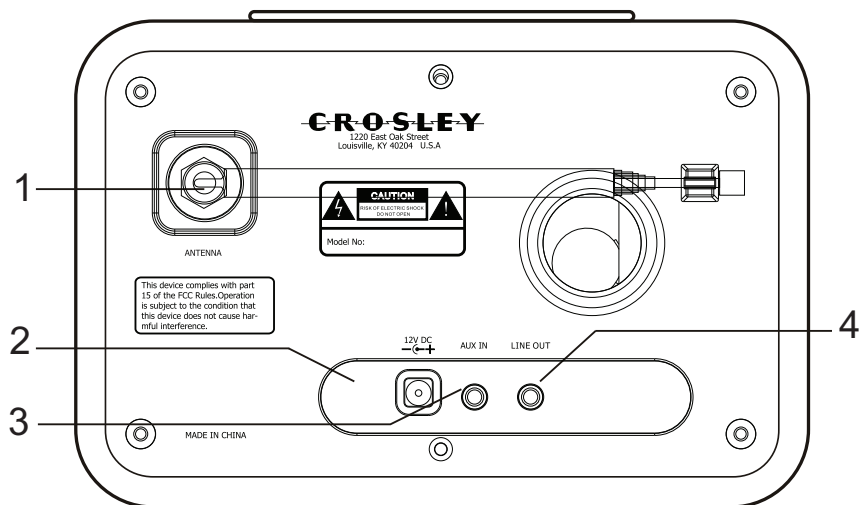

CONTROL LOCATORS

1. Antenna
2. Power Jack
3. Aux IN
4. Line OUT

Unpacking

1. Remove packing material from unit.
Note: Save all packing materials.
2. Remove plastic bag covering radio.
3. Remove ties from AC to DC power adaptor.
4. Remove supplied audio cable from plastic bag.
Note: Save cable for portable audio component hookup.

Set Up

1. Unwind the AC to DC power adaptor.
2. Plug AC end of the power cord into appropriate outlet.
3. Plug the small end of the power adaptor into the Power Jack in the back of the unit.

Getting Started

AM/FM RADIO

1. Turn the Function Knob to the desired tuning band.
The Power Indicator will turn green to indicate the power is turned on.
2. Rotate the Tuning Knob to select the desired station.
The Tuning LED will appear brightest when the best signal is reached. Some weaker but listenable AM stations may not turn on the Tuning LED.
3. Adjust the volume to the desired level by rotating the Volume Knob.
4. Position the antenna for optimum reception.

PORTABLE AUDIO READY

1. Turn the function knob to "AUX". Turn the volume to a lower level.
2. Using the supplied male to male mini pin connector, connect one end to the AUX OUTPUT jack on the back of the unit.
3. Turn on your portable audio device and set the volume on the device to approximately 10% of full volume.
4. Plug the other end into an output or headphone jack on your external device.
5. Begin playback on your external device.
Adjust the volume to your desired listening level on your iSOLO.
For more volume, increase the setting on your portable device.

Auxillary OUTPUT

The Auxillary Output feature is designed to let you use your iSOLO as an audio source for other components.

1. Using the supplied mini pin connector, connect one end to the OUTPUT JACK (auxiliary output), on the back of your iSOLO.
2. Plug the other end into an auxiliary input jack on the desired component.

Note: If the desired component does not have a mini pin input jack, a separate cable will be needed.

Auxillary OUTPUT cont.

3. For information on using the auxiliary input feature of a specific component, refer to the auxiliary input section in the instruction manual of the desired component.
4. Turn the Function Knob to select the desired output; AM, FM, or AUX.

Note: You can still listen to your iSOLO while using the aux out feature.

iPod/iPhone OPERATION

1. Insert the correct dock adapter (supplied with your iPod or iPhone) that fits your iPod/iPhone. Your iPod/iPhone should fit snugly into the correct adapter. Gently press the adapter until it snaps firmly into place.
2. Place your iPod/iPhone into the dock. Your iPod/iPhone will begin charging
3. Turn the Function Switch to the iPod position.
4. Browse your iPod/iPhone to select a song or playlist and press play.
5. Adjust the volume to the desired listening level by turning the Volume Knob.
6. To remove the dock adapter, push your fingernail into the slot in the back of the adapter and lift up.

Getting Started

Troubleshooting Guide

There is no power

1. Make sure AC to DC power cord is plugged in at the wall and at the back of the unit.
2. Check that the Function Knob is not in the OFF position.

There is no sound

1. Make sure the Function switch is not in the AUX position.

The sound is distorted.

1. Adjust the tuner and/or antenna to improve the signal strength. Under certain circumstances, the reception may be improved by relocating the unit.
2. When using the “Aux in” plug, turn off any EQ settings on the portable device.
3. Check the volume level of external device if listening to auxiliary input. It should be set as low as possible.

LIMITED MANUFACTURERS WARRANTY

Crosley Radio, Inc. warrants the product to be free from defects in material and workmanship under normal use for a period of one year from the original date of purchase. This warranty is not transferable. If the product is determined to be defective during the warranty period, the unit will be repaired or replaced at Crosley Radio's sole discretion. This warranty covers manufacturing defects and normal consumer use and does NOT cover damage or failure as a result of abuse, accident, alterations, misuse, neglect, abnormal wear and tear, inadequate maintenance, commercial or unreasonable use, damage caused by power surges, mishandling, accident, acts of God or attempted repair by an unauthorized service agent. Also not covered are cosmetic damages, cords and antennas. Should this product fail to function in a satisfactory manner, it is best to first return it to the store or retailer where it was originally purchased. If additional service is still needed, the original purchaser must FIRST contact our offices to obtain an RA (Return Authorization) Number.

TO OBTAIN AN RA NUMBER
CALL: **1.888.CROSLEY**
(1.888.276.7539)

Send the unit prepaid to the address below in the original packaging (or reasonable substitute to prevent damage). Clearly mark your RA number on the outside packaging and include the original sales receipt (or a copy) indicating date of purchase, amount paid, and place of purchase. You must also include your full name, shipping address and daytime contact number. Please include a check or money order in the amount of \$19.95, made payable to Crosley Radio, to cover handling and return shipping charges. Returned products will not be shipped to PO Boxes. Crosley Radio will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information.

CROSLEY RADIO
ATTN: RETURNS DEPT
2001 PRODUCTION DRIVE
Louisville, KY 40299

For additional support: Crosley Radio Consumer Service Department
24 hours a day / 7 days a week
Telephone: 1.888.CROSLEY (1.888.276.7539)

There are no express warranties except as listed above.
The purchaser's bill of sale is the only proof of warranty entitlement.

This warranty gives the purchaser specified legal rights in addition to any rights which may vary from state to state.

In accordance with the "Moss-Magnuson Warranty Act" of July 10, 1975, this is termed a "limited warranty" which in no way compromises Crosley Radio's high standards of quality and workmanship.



1220 East Oak Street
Louisville, Kentucky 40204